

# artesia

## PE-88



## Owner's Manual

 
Virgin Musical Instruments



## Precaution

Thank you for purchasing this digital instrument. For correct operation and safety, please read the manual carefully and keep it for future reference.

## Safety Precautions

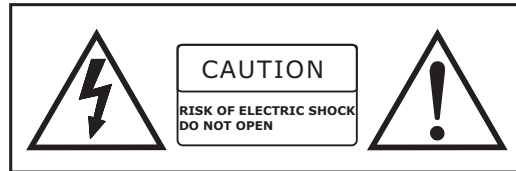

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

## Important Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings; install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over (Figure 1).
- 13) Unplug this apparatus during lightning storms or when unused for a long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



(Figure 1)

**WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

**CAUTION:** Apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Always make sure all batteries are inserted the correct way around to match the +/- polarity markings.

Always replace all of the batteries at the same time. Do not combine old and new batteries, also do not mix battery types, as this can cause overheating, or fire, or battery fluid leakage.

Remove the batteries from the instrument if it is not to be used for a long time.

**WARNING:** This product contains chemicals, including lead, known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

## **Thank you for choosing Artesia!**

Your portable 88 note piano not only contains leading and innovative technology but it also is developed by and for musicians of all playing levels. Featuring a natural balanced, semi-weighted keyboard action and an advanced acousta ridge tone generation sound technology, that will provide you with a rich performing and playing experience.

This PE-88 offers many features and connection possibilities. To get the most out of your instrument, please read this manual and try out the various functions that can compliment your playing style.

Whether it is on stage, studio or home, your new portable piano is designed to give you a lifetime of musical enjoyment.

### **Features Include:**

- . 88 Key Natural Balanced, semi-weighted Keyboard
- . DSP Functions for additional realism
- . USB to Host and USB Audio Connection
- . All Connectivity Jacks including Aux. In and Out Jacks
- . Battery Operated (6 D Cell Batteries are not included)
- . Includes AC Adaptor, Sustain Pedal, Music Rack and more

### **FCC Statement**

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- . Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- . Consult the dealer or an experienced radio/TV technician for help.




# Contents

Panel Control .....	3
Basic Operation .....	4
Connections .....	6
Voice .....	9
Effect .....	12
Function .....	14
Auto Accompaniment .....	30
Registration Memory .....	35
Song Recording .....	37
Play Alone Songs .....	39
Factory Reset .....	41
Appendix .....	42
Specifications .....	46
Warranty .....	47

# Rear Panel

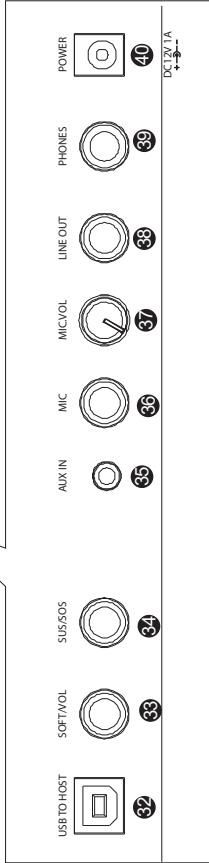

# Top Panel

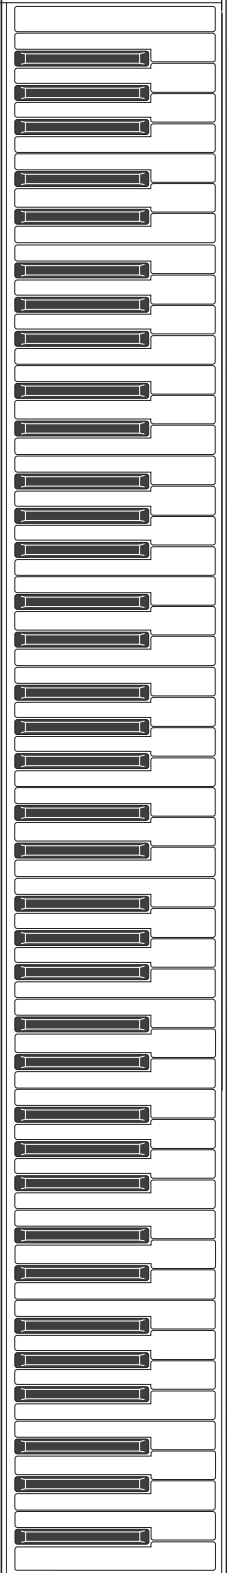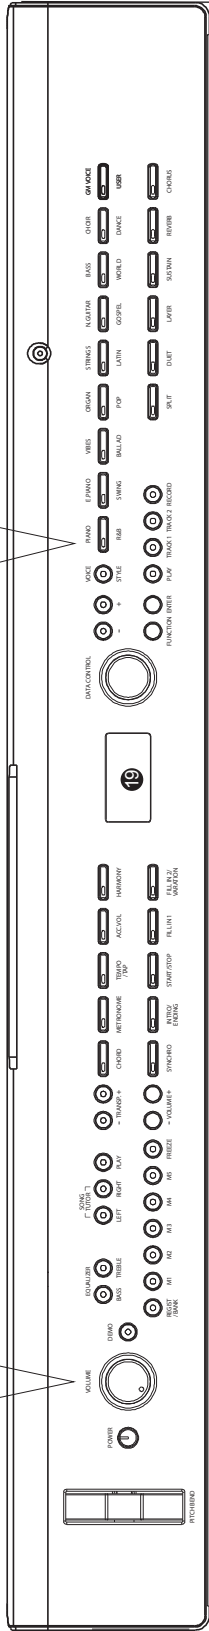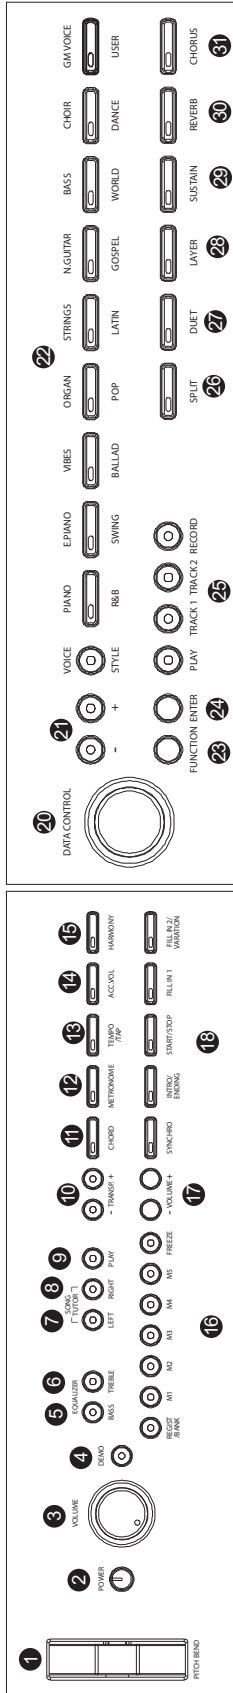   

# Panel Control

## Front Panel

1. PITCH BEND
2. POWER
3. VOLUME
4. DEMO
5. BASS EQUALIZER
6. TREBLE EQUALIZER
7. LEFT
8. RIGHT
9. PLAY
10. -TRANSP.+
11. CHORD
12. METRONOME
13. TEMPO/TAP
14. ACC.VOL
15. HARMONY
16. REGIST/BANK
  - M1-M5
  - FREEZE
17. -VOLUME+
18. SYNCHRO
  - INTRO/ENDING
  - START/STOP
  - FILL IN 1
  - FILL IN 2/VARIATION
19. LCD

20. DATA CONTROL
21. -/+
22. VOICE/STYLE
23. FUNCTION
24. ENTER
25. PLAY
  - TRACK 1
  - TRACK 2
  - RECORD
26. SPLIT
27. DUET
28. LAYER
29. SUSTAIN
30. REVERB
31. CHORUS

## Rear Panel

32. USB TO HOST
33. SOFT/VOL
34. SUS/SOS
35. AUX IN
36. MIC
37. MIC.VOL
38. LINE OUT
39. PHONES
40. DC12V

# Basic Operation

## Turn on the power

Turn the power on by pressing the POWER switch, the panel LED will light.

 


### NOTE

If you don't play or make any operational changes then the piano will automatically turn off in 30 minutes.

## Adjust the Main Volume

Use [VOLUME] control to adjust the volume to your desired level.

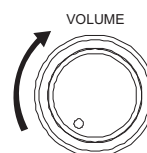


## The Music Desk

Insert the two stickings of the music stand into the holes located at the rear of the piano control panel.

## Bass&Treble

With the Bass and Treble controls you can adjust the sound of your piano to your room or according to your taste. Press the [BASS] button, then use [+/-] button or the [DATA CONTROL] knob to set the value .

 Press the [TREBLE] button, then use [+/-] button or the [DATA CONTROL] knob to set the value.

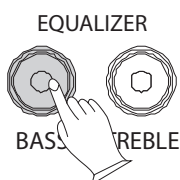




## Pitch Bend

(1) The PITCH BEND can be used to adjust the pitch of the keyboard. Push the wheel upward, the keyboard pitch will be increased and pull wheel downward to decrease the keyboard pitch.

(2) Pull the wheel to the downward position for about 2 seconds, LCD will display the pitch range (pitch sensitivity). You can use the [+/-] buttons or data control to set the pitch sensitivity: 0~12 semitones.

 When the power is turned ON, the preset sensitivity is +/- 2 semitones.


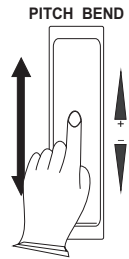


## Demo Play

There are 10 preset demo songs that you can play individually. Here's how you can select and play the demo songs .

1. Press [DEMO] button to play the demo songs in sequence.

  DEMO

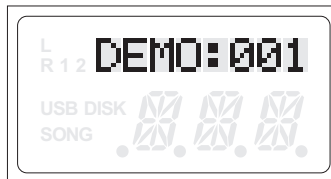

2. Use the data dial or +/- button to select a demo song.
3. Press [DEMO] button again to stop playing.

# Connections

## Using USB-MIDI/USB Audio

This product allows the transfer of MIDI information over USB to a laptop, tablet or smartphone. As complicated as this might sound, it's actually pretty straight forward. This piano is USB Class Compliant; therefore there is no need to install a driver to enable it to work with a computer. Simply just plug it in and the computer's operating system will do the rest. The piano will work with all standard MIDI based computer software.

USB AUDIO interface is a digital audio interface. By USB cable, you can digitally transfer intact audio signals from a Laptop, Tablet or Smartphone to this instrument, and enjoy it on this instrument or use it for accompaniments when you play this instrument; likewise, you can transfer intact audio signals of the instrument to Laptop, Tablet or Smartphone to record and edit music.



USB TO HOST

## Aux In

 
The Aux In stereo Mini-Plug Connector allows you to play from an external sound source (such as a Laptop, Tablet or Smartphone output) through the piano's built-in speakers or headphone outputs.



The Aux In Jack is on the back of the piano.

## Mic jack

A Microphone with a 1/4" plug can be attached into the rear panel [MIC] jack.




## Mic.vol

Use [MIC.VOL] control to adjust the volume of the microphone to your desired level.



## Line Out jack

 The Line out jack can be used to deliver the output of the piano to a keyboard amplifier, stereo sound system, mixing console or recording device.

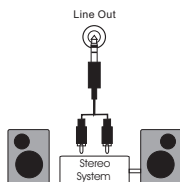


### NOTE

To avoid damaging the speakers, please ensure that the volume has been set to the minimum level before connecting the power and other devices.

## Using Headphones

 
One standard stereo headphones can be plugged in here for private practice or late-night playing. The internal speaker system is automatically shut off when a pair of headphones is plugged into the PHONES jacks.

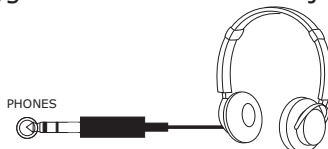

## SOFT/SOSTENUTO/SUSTAIN PEDAL

Connect the Sustain Pedal to the Pedal Input [SUS/SOS] to obtain the Sustain effect when used. It has the same function as the "sustain" pedal on the acoustic piano.

 It provides sustain and lets the sound slowly decay after the keys have been released.



### NOTE

If you want to insert the pedal, you should ensure the power is turned off.

When connecting a pedal, the piano will function accordingly.

**SOFT:** gives the piano voices a "lower, softer" sound.

**SOSTENUTO:** this allows only the notes pressed on the keyboard before the Sostenuto pedal is activated to sustain and no subsequent notes played afterwards.

 
 
**SUSTAIN:** has the same function as the "sustain" pedal on the acoustic piano. It provides sustain and lets the sound slowly decay after the keys have been released.

### Volume Pedal

If necessary it is possible to connect a Volume Pedal or a two pedal system to the piano, but it is necessary to program the instrument (See Below).



Press the [FUNCTION] button repeatedly to select "PEDAL", then press the [ENTER] button to confirm, use [+/-] button or the [DATA CONTROL] knob to select "PEDAL3", then press the [ENTER] button to confirm, the LCD will display "PD3 SOFT", use [+/-] button or the [DATA CONTROL] knob to select "Pd3 EXP", then press the [FUNCTION] button, the LCD will display "PEDAL", press the [ENTER] button to confirm, use [+/-] button or the [DATA CONTROL] knob to select "EXP SET", then press the [ENTER] button, press the [+] button to select "EXP-VAL1", press one side of the pedal, then press the [-] button to select "EXP-VAL2", press another side of the pedal, and then press the [ENTER] button, the pedal will be set and the LCD will display "EXP\_OK!".

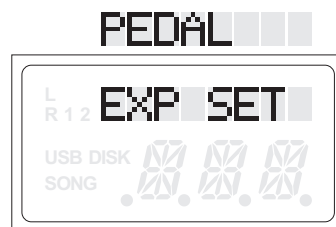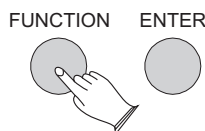

### Using DC Power Jack

The Connection is for the included DC power adapter. Please use only the provided adapter.

# Voice

 
137 voices in total (see voice list: P.43)

## Select a Voice

You can use the voice button on the panel, or the [+/-] button and the data dial to select voices.


### • Direct Select Button

When the [VOICE/STYLE] button is not lit, you can use the Direct Select Button to select the voice.



### • Use Data Dial and [+/-] Button

 In voice mode, using data dial or [+/-] buttons can select voice quickly.


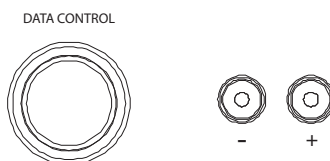


## Split Button

Press the [SPLIT] button to select split mode, your keyboard will be split into two sections which means different voices can be played with the left and right hands at the same time.

## ● Split Voice

  Press the [SPLIT] button, the Split cursor will flash, and the split voice will appear in the LCD display for 3 seconds, press the[+/-] buttons or turn the dial to select the left voice.

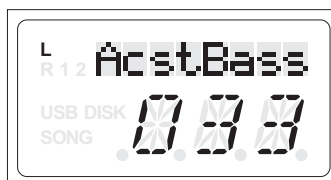

Press [SPLIT] button again to turn off the split voice.

## ● Adjusting Split Voice Volume

Reference : Split Voice Volume(P.20).

## ● Changing the Split Point

1.Hold down the [SPLIT] button. the LCD will display "SPLT PT", you can use the[+/-] buttons or [DATA CONTROL] knob to move the split point.

2.Reference : Split Point(P.18).

 
 
## Duet Button

This mode is great for using with teacher and student or anytime two people want to play at the piano at the same time.

Press the [DUET] button to select DUET mode. In this mode, the keyboard will be split into two playing areas.

Right: from C#3 to C7

Left: from A-1 to C3

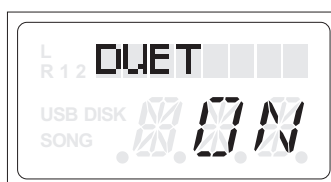



## Layer Button

Press the [LAYER] button to select Layer mode, and then two instruments will sound when you play the keyboard. simultaneously.

## ● Select Layer Voice

  Press the [LAYER] button and its indicator will flash. Use the [+] and [-] buttons or the [DATA CONTROL] knob to select the second voice. If you don' t choose the second voice within 3 seconds, the LCD will return to display the Main voice.

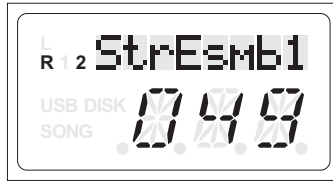

- **Set Dual(Layer) Voice Volume**

Reference: Dual Voice Volume(P.20).

- **Exit Layer Mode**

Press the [LAYER] button again to exit Dual mode and its indicator will turn off.

### User Button

**User Voice**-You can chose any instrument voice to be the USER quick start voice button.

In the voice mode, the [VOICE/STYLE] button will be unlighted, hold down the [GM VOICE/ USE] button, the indicator will light. Then you can [+] and [-] buttons or the [DATA CONTROL] knob to select the desired voice, the voice will automatically save.



**User Style**-You can chose any instrument style to be the USER quick start style button.

In the style mode, he [VOICE/STYLE] button will light, hold down the [GM VOICE/ USE] button, the indicator will light. Then you can [+] and [-] buttons or the [DATA CONTROL] knob to select the desired style, the style will automatically save.

# Effect

## Digital Effect

 
 
These effects add additional realism to the overall sounds.

### • Reverb

The [REVERB] button selects digital Reverb effects that you can use for extra depth and expressive power.

Press the [REVERB] button, to engage this effect.

Press the [REVERB] button, use [+]and[-] buttons or turn the Control Knob to select a different Reverb type. Default type:2Hall 2.

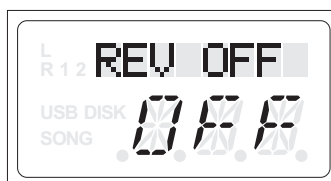

The piano has 8 reverb types:1Hall1; 2Hall2; 3Room1; 4Room2; 5Room3; 6Stage1; 7Stage2; 8Plate.


### • Adjusting Reverb Level

 Reference: Reverb level (P.23).

### • Chorus

Press the [CHORUS] button to turn on or turn off the function.

The Default is Off. Press the [CHORUS] button, the LCD display:3chorus3.



The piano has 13 chorus types :1Chorus1; 2Chorus2; 3Chorus3;4Chorus4; 5Feed back; 6Flanger1; 7ShrtDely; 8ShrtDIFb; 9Flanger2; 10Flanger3;11Celeste1; 12Celeste2; 13Celeste3.

Press the [CHORUS] button, use [+]and[-] button or turn the [DATA CONTROL] knob to select chorus type.



## • Adjusting Chorus Level

Reference: Chorus level (P.24).

### Sustain Button

This function adds Sustain to the notes that you play.  
It has the same effect as pressing down on a sustain pedal.

 
 


Press [SUSTAIN] button again to turn sustain off.

### Transpose Button

The Transpose function allows you to change the pitch of the instrument in semitone steps, up to a maximum setting of 12 semitones (a maximum of one octave up or down).

Press the [TRANSP.+] or [TRANSP.-] buttons to change the transpose value.

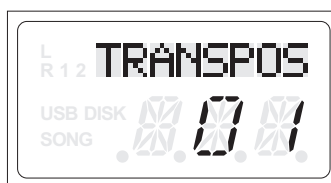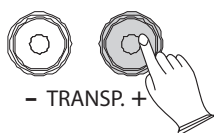

#### NOTE

If you don't press any button for 3 seconds after entering the Transpose setting mode, it will quit this menu automatically.

# Function

The [FUNCTION] button provides access to a range of functions that give your PE-88 extraordinary versatility. The functions are categorized in groups as follows:

Menu	Submenu	Display Name (8 capital letters)	Parameter Range	Default
PERFORM	Tune	TUNE	-64~63	0
	Piano key Touch Sensitivity	TOUCH	TOUCH LO, TOUCHNOR TOUCH HI, TCH2 LOW TCH2 NOR, TCH2 HI FIXED	TOUCHNOR
	Fixed Touch	NO TOUCH	00~127	100
	Main Voice Octave	MAIN OCT	-2~2	0
	Split Voice Octave	SPLT OCT	-2~2	0
	Dual Voice Octave	DUAL OCT	-2~2	0
	Split Point	SPLT PT	1~88	35
	Chord Point	CHRD PT	1~88	35
	Metronome Signature	METRO SG	2/2, 1/4, 2/4, 3/4, 4/4 5/4, 6/4, 3/8, 6/8, 7/8 9/8, 12/8	4/4
	OTS	OTS	ON/OFF	OFF
MIXER	Main Voice Volume	MAIN VOL	0~127	110
	Split Voice Volume	SPLT VOL	0~127	110
	Dual Voice Volume	DUAL VOL	0~127	75
	Metronome Volume	MET VOL	0~127	100
	Song Volume	SONG VOL	0~127	110

Menu	Submenu	Display Name (8 capital letters)	Parameter Range	Default
MIXER	Main Voice Pan	MAIN PAN	-64~63	00
	Split Voice Pan	SPLT PAN	-64~63	00
	Dual Voice Pan	DUAL PAN	-64~63	00
EFFECT	Reverb Type	REV TYPE	0:REV OFF, 1:HALL 1 2:HALL 2, 3:ROOM 1 4:ROOM 2, 5:ROOM 3 6:STAGE 1, 7:STAGE 2 8:PLATE	HALL 2
	Main Voice Reverb Level	MAIN REV	0~127	36
	Split Voice Reverb Level	SPLT REV	0~127	36
	Dual Voice Reverb Level	DUAL REV	0~127	36
	ChorusType	CHR TYPE	0:CHROFF, 1:CHORUS1 2:CHORUS2, 3:CHORUS3 4:CHORUS4, 5:FEEDBACK 6:FLANGER1, 7:SHORTDLY 8:SHORTFB,9:FLANGER2 10:FLANGER3, 11:CELESTE1 12:CELESTE2, 13:CELESTE3	CHORUS 3
	Main Voice Chorus Level	MAIN CHR	0~127	110
	Split Voice Chorus Level	SPLT CHR	0~127	110
	Dual Voice Chorus Level	DUAL CHRL	0~127	110
	Local	LOCAL	ON/OFF	ON
MIDI SET	MIDI IN	MIDI IN	ON/OFF	ON
	MIDI OUT	MIDI OUT	1-9,11-16 Off	01
PEDAL	Pedal 1 Set*	PEDAL 1	0PD1 NULL, 1PD1 SUS 2PD1 SOS, 3PD1 SOFT 4PD1 STRT(start/stop) 5PD1 FIL1, 6PD1 FIL2 7PD1 MEM(load mem)	1PD1 SUS

Menu	Submenu	Display Name (8 capital letters)	Parameter Range	Default
PEDAL	Pedal 2 Set*	PEDAL 2	0PD2 NULL, 1PD2 SUS 2PD2 SOS, 3PD2 SOFT 4PD2 STRT(start/stop) 5PD2 FIL1, 6PD2 FIL2 7PD2 MEM(load mem)	2PD2 SOS
	Pedal 3 Set*	PEDAL 3	0PD3 NULL, 1PD3 SUS 2PD3 SOS, 3PD3 SOFT 4PD3 STRT(start/stop) 5PD3 FIL1, 6PD3 FIL2 7PD3 MEM(load mem) 8PD3 EXP	3 PD3 SOFT
	Expression Pedal*	EXP SET	0~255	0~255
OTHER	DeleteTrack	DEL REC	DEL TRK1 DEL TRK2 DEL ALL	DEL TRK1
	Auto Off Set*	AUTO OFF	0 20-60min	30min
	Factory Reset	RESET	Press [ENTER] to confirm	

 
 
*Note: If there is no operation within 3 seconds after you press the Function button, the piano will automatically exit the function menu.*

*The functions that are marked (\*) can be saved after the power is turned off.*

## Tune

This function makes it possible to tune the pitch of your piano to match other instruments.


Press the [FUNCTION] button, the LCD will display "PERFORM", then press the [ENTER] button to confirm and use [+/-] buttons or the [DATA CONTROL] knob to set the tune value: From -64 to 63(Default:00).

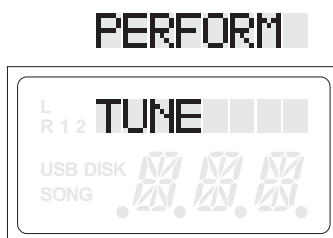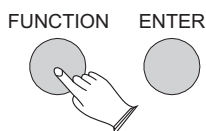

Press the [+/-] buttons simultaneously to restore the default value.

## Touch

 There are 7 different Touch Settings for you to select . Press the [FUNCTION] button, the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] button or the [DATA CONTROL] knob to select "TOUCH", press the [ENTER] button to confirm. Use [+/-] button or the [DATA CONTROL] knob to set the value:1 TOUCH LO,2 TOUCH NOR,3 TOUCH HI,4TCH2 LOW, 5 TCH2 NOR,6 TCH2 HI,7 FIXED.(Default:2)

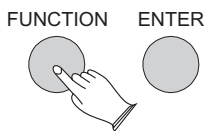

PERFORM




Press the [+/-] buttons simultaneously to restore the default value.


## Touch Fixed

 The fixed Touch means there is no touch sensitivity, this is commonly used in Organsettings.

Press the [FUNCTION] button, the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] button or the [DATA CONTROL] knob to select "NO TOUCH", press the [ENTER] button to confirm , use [+/-] button or the [DATA CONTROL] knob to set the touch sensitivity value:0-127.(Default:100)

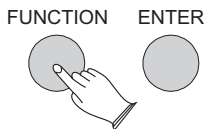


PERFORM

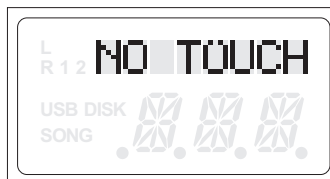 

Press the [+/-] buttons simultaneously to restore the default value.

## Main Voice Octave

 Press the [FUNCTION] button, the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] button or the [DATA CONTROL] knob to select "MAIN OCT", press the [ENTER] button to confirm , use [+/-] button or the [DATA CONTROL] knob to set the main voice value:-2-2.(Default:0)

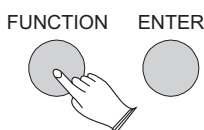

PERFORM




Press the [+/-] buttons simultaneously to restore the default value.


### Split Voice Octave

 In this function you can adjust the split voice octave value.

Press the [FUNCTION] button, the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "SPLT OCT", press the [ENTER] button to confirm, use [+/-] button or the [DATA CONTROL] knob to set the split voice value: -2-2. (Default:0)

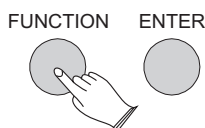


PERFORM

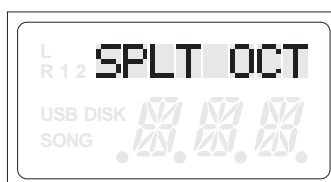 


Press the [+/-] buttons simultaneously to restore the default value.

### Dual Voice Octave

 Press the [FUNCTION] button, the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "DUAL OCT", press the [ENTER] button to confirm, use [+/-] button or the [DATA CONTROL] knob to set the dual voice value: -2-2. (Default:0)

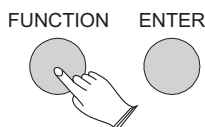


PERFORM

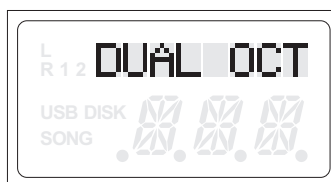 


Press the [+/-] buttons simultaneously to restore the default value.

### Split Point

 Press the [FUNCTION] button, until the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "SPLT PT", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :1-88. (Default:35).

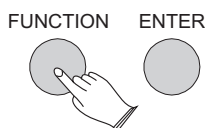

PERFORM

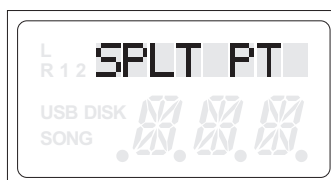 


Press the [+/-] buttons simultaneously to restore the default value.

## Chord Point

 The Chord Point is where the Chord Accompaniment is triggered to begin playing.

Press the [FUNCTION] button, until the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "CHRD PT", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :1-88.(Default:35).

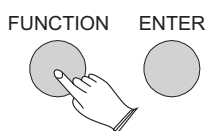


PERFORM




Press the [+/-] buttons simultaneously to restore the default value.

## Metronome Time Signature

 Press the [FUNCTION] button, until the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "METRO SG", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the metronome signature :1/4, 2/4, 3/4, 4/4, 5/4,6/4, 3/8, 6/8, 7/8, 9/8, 12/8.(Default:4/4).

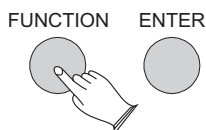

PERFORM

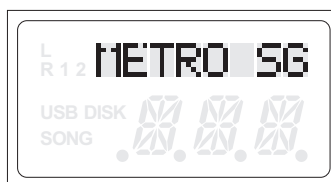 


Press the [+/-] buttons simultaneously to restore the default value.


## OTS

 This function is a convenient feature which automatically selects a suitable instrument voice for you when you select a particular rhythm style.

Press the [FUNCTION] button, until the LCD will display "PERFORM", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "OTS", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "On" or "OFF".

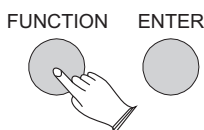


## PERFORM

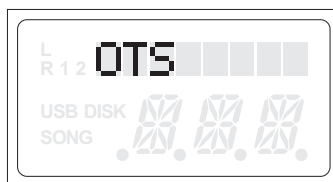 


Press the [+/-] buttons simultaneously to restore the default value.

### Main Voice Volume

 This function sets overall volume of each instrument voice. Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, the LCD will display "MAIN VOL", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :00-127.(Default:110).

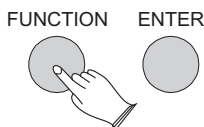


## MIXER

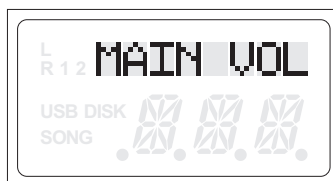 


Press the [+/-] buttons simultaneously to restore the default value.

### Split Voice Volume

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "SPLT VOL", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :00-127.(Default:110).

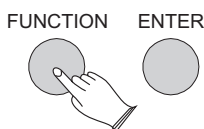

## MIXER

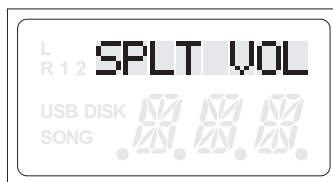 


Press the [+/-] buttons simultaneously to restore the default value.


### Dual Voice Volume

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "DUAL VOL", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :00-127.(Default:75).



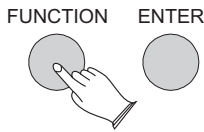


MIXER

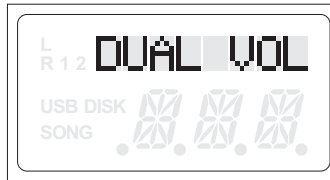 


Press the [+/-] buttons simultaneously to restore the default value.

## Metronome Volume

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "MET VOL", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :00-127.(Default:100).

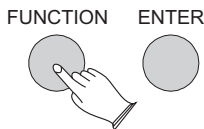


MIXER

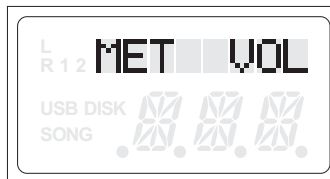 


Press the [+/-] buttons simultaneously to restore the default value.

## Song Volume

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "SONG VOL", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :00-127.(Default:110).

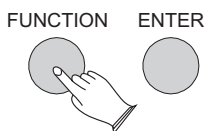

MIXER


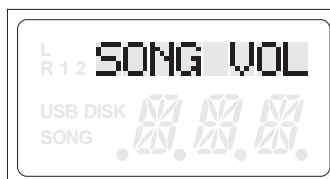 


Press the [+/-] buttons simultaneously to restore the default value.

## Main Voice Pan

  This function sets the stereo position (to the center, left or right) of each orchestration part to create a broad stereo image of your sound.


Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "MAIN PAN", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :-64-63.(Default:00).

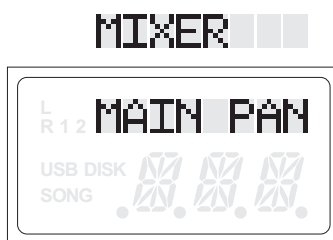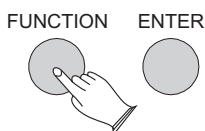

Press the [+/-] buttons simultaneously to restore the default value.

### Split Voice Pan


 
Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "SPLT PAN", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :-64-63.(Default:00).

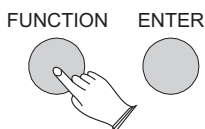

Press the [+/-] buttons simultaneously to restore the default value.

### Dual Voice Pan

  
Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "DUAL PAN", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :-64-63.(Default:00).

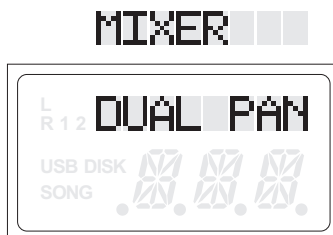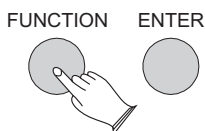


Press the [+/-] buttons simultaneously to restore the default value.

### Reverb Type

 Press the [FUNCTION] button repeatedly to select "EFFECT", then press the [ENTER] button to confirm, the LCD will display "REV TYPE", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :1-8.(Default:2).

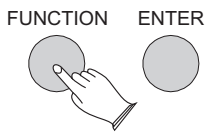

## EFFECT

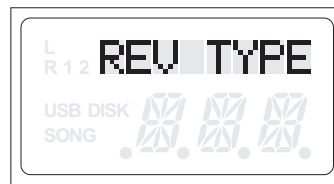 


1	2	3	4	5	6	7	8
Hall1	Hall2	Room1	Room2	Room3	Stage1	Stage2	Plate


Press the [+/-] buttons simultaneously to restore the default value.

### Main Voice Reverb Level

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "MAIN REV", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :0-127.(Default:36).

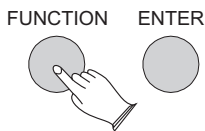


## EFFECT

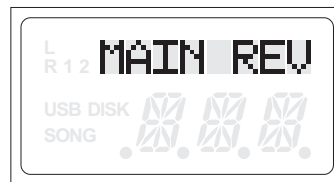 


Press the [+/-] buttons simultaneously to restore the default value.

### Split Voice Reverb Level

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "SPLT REV", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :0-127.(Default:36).

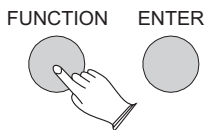


## EFFECT

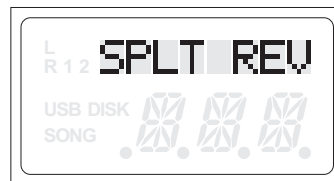 


Press the [+/-] buttons simultaneously to restore the default value.

## Dual Voice Reverb Level

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "DUAL REV", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :0-127.(Default:36).

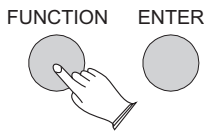


EFFECT ■■■

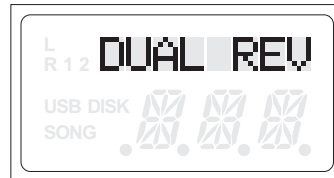 


Press the [+/-] buttons simultaneously to restore the default value.

## ChorusType

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "CHR TYPE", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :1-13.(Default:3).

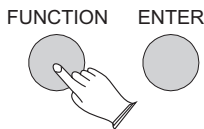

EFFECT ■■■

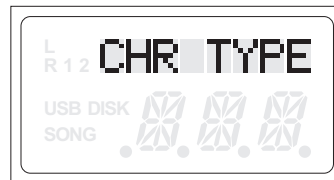 


1	2	3	4	5	6	7	8
Chorus1	Chorus2	Chorus3	Chorus4	Feedback	Flanger 1	ShortDely	Short FB
9	10	11	12	13			
Flanger2	Flanger3	Celeste1	Celeste2	Celeste3			


Press the [+/-] buttons simultaneously to restore the default value.

## Main Voice Chorus Level

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "MAIN CHR", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :00-127.(Default:110).

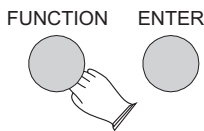


## EFFECT

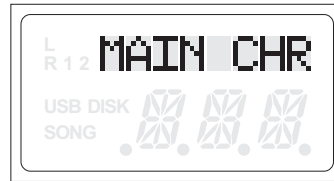 

Press the [+/-] buttons simultaneously to restore the default value.

### Split Voice Chorus Level

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "SPLT CHR", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :00-127.(Default:110).

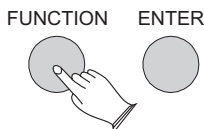


## EFFECT




Press the [+/-] buttons simultaneously to restore the default value.

### Dual Voice Chorus Level

 Press the [FUNCTION] button repeatedly to select "MIXER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "DUAL CHR", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value :0-127.(Default:110).

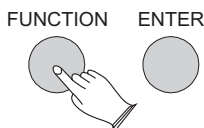


## EFFECT

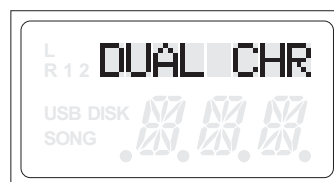 

Press the [+/-] buttons simultaneously to restore the default value.

### Local

 Press the [FUNCTION] button repeatedly to select "MIDISSET", then press the [ENTER] button to confirm, the LCD will display "LOCAL", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to set the value the function on or off.

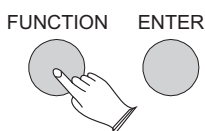

## MIDISET

 


Local on----- Normal operation. Keyboard notes that are played are heard and Controller MIDI data is sent to the PE-88 Sound Engine.  
 Local off----- There will be no sound produced by the piano's own tone generator when notes are play, so no sound will be heard . The MIDI note data will be transmitted and function as usual. This is useful when using the PE-88 as a master keyboard or controller.


Press the [+/-] buttons simultaneously to restore the default value.

### MIDI IN

Press the [FUNCTION] button repeatedly to select "MIDISET", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "MIDI IN", press the [ENTER] button to confirm , use [+/-] buttons or the [DATA CONTROL] knob to select "ON" or "OFF".

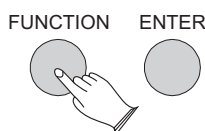


## MIDISET

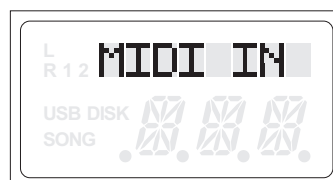 

Press the [+/-] buttons simultaneously to restore the default value.

### MIDI OUT

 Press the [FUNCTION] button repeatedly to select “MIDISET” , then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "MIDI OUT", press the [ENTER] button to confirm , use [+/-] buttons or the [DATA CONTROL] knob to select 1~16,OFF(not include 10).

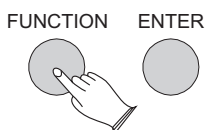

## MIDISET



Press the [+/-] buttons simultaneously to restore the default value.

## Pedal 1

Press the [FUNCTION] button repeatedly to select "PEDAL", then press the [ENTER] button to confirm, the LCD will display "PEDAL1", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select 0-7(0 "PD1 NULL", 1 "PD1 SUS", 2 "PD1 SOS", 3 "PD1 SOFT", 4 "PD1 STRT", 5 "PD1 FIL1", 6 "PD1 FIL2", 7 "PD1 MEM").



Press the [+/-] buttons simultaneously to restore the default value.

Pd1-Sus----- This function helps you to get a voice with a sustained effect while playing the keyboard.

Pd1-Sos-----If you play a note or chord on the keyboard and press the sostenuto pedal while the notes are held, those notes will be sustained as long as the pedal is held, but all subsequently played notes will not be sustained.

Pd1-Soft----- It performs the same function as the soft pedal on an actual acoustic piano, the volume of the whole keyboard will decrease when you play the keys and depress the soft pedal.

Pd1-Strt-----This function corresponds to the [START/STOP] button on the control panel. It turns the Rhythm on and off whenever you press the pedal.


Pd1-Fil1-----This function correspond to the [FILL IN1] button on the control panel. It adds dynamic variations and breaks in the rhythm of the accompaniment.

Pd1-Fil2-----This function correspond to the [FILL IN2/VARIATION] button on the control panel. Lets you add dynamic variations and breaks in the rhythm of the accompaniment.


Pd1-MemoryUp-----Anytime you store to a REGISTRATION MEMORY button, all settings previously stored in that button will be erased and replaced by the new settings.

## Pedal 2

 Press the [FUNCTION] button, use [+/-] buttons to select "PEDAL", then press [ENTER] button to confirm, and use [+/-] buttons or the [DATA CONTROL] to select "PEDAL2", press [ENTER] button to confirm, and use [+/-] buttons or the [DATA CONTROL] knob to select 0-7(0 "PD2 NULL", 1 "PD2 SUS", 2 "PD2 SOS", 3 "PD2 SOFT", 4 "PD2 STRT", 5 "PD2 FIL1", 6 "PD2 FIL2", 7 "PD2 MEM" ).

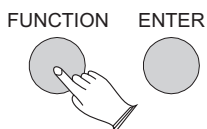


PEDAL

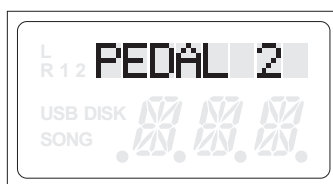 


Press the [+/-] buttons simultaneously to restore the default value.

### Pedal 3

 Press the [FUNCTION] button, use [+/-] buttons to select "PEDAL", then press [ENTER] button to confirm, and use [+/-] buttons or the [DATA CONTROL] to select "PEDAL3", press [ENTER] button to confirm, and use [+/-] buttons or the [DATA CONTROL] knob to select 0-8 (0 "PD3 NULL", 1 "PD3 SUS", 2 "PD3 SOS", 3 "PD3 SOFT", 4 "PD3 STRT", 5 "PD3 FIL1", 6 "PD3 FIL2", 7 "PD3 MEM", 8 PD3 EXP).

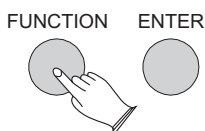

PEDAL

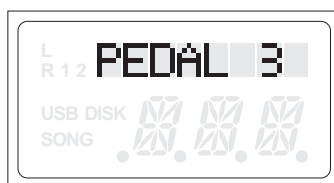 

Press the [+/-] buttons simultaneously to restore the default value.

### Expression (Volume) Pedal Set

Reference: Volume Pedal. (P.8)

Different types of expression pedals have different maximum or minimum values.

This piano supports the manual setting of maximum and minimum values.

Press the [FUNCTION] button repeatedly to select the "PEDAL", then press the [ENTER] button to enter pedal setting sub menu, Use the [DATA CONTROL] to select "EXP SET".

 
Move the expression pedal to maximum value (or minimum value).

Press the [+] button to confirm maximum value (or minimum value).

Move the expression pedal to minimum value (or maximum value).

Press the [-] button to confirm minimum value (or maximum value).

Press the [ENTER] button to confirm and save setting.

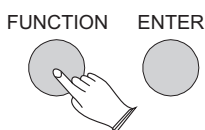

PEDAL







## Delete Track

 
 
To Delete a recorded track from the Music Recorder please follow instructions below:

Press the [FUNCTION] button repeatedly to select "OTHER", then press the [ENTER] button to confirm, the LCD will display "DEL REC", press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select DEL TRK1, DEL TRK2 or DEL ALL, press the [ENTER] button to delete the desired track.

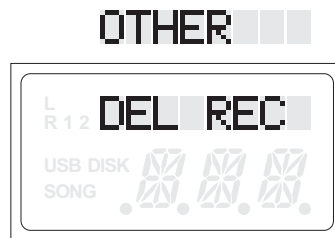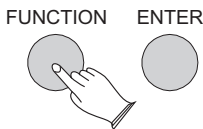

## Auto Off Set

 
 
Press the [FUNCTION] button repeatedly to select "OTHER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "AUTO OFF", then press [ENTER] button to confirm, and use [+/-] buttons or the [DATA CONTROL] knob to set the off time :20~60 min (Off:Cancel).

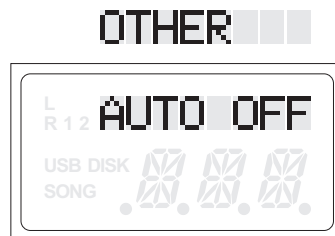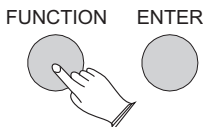

Press the [+/-] buttons simultaneously to restore the default value.

## Factory Reset

  
Press the [FUNCTION] button repeatedly to select "OTHER", then press the [ENTER] button to confirm, use [+/-] buttons or the [DATA CONTROL] knob to select "RESET", then press [ENTER] button to confirm to restore all functions to factory defaults.

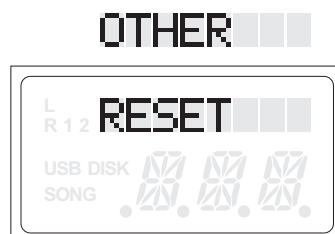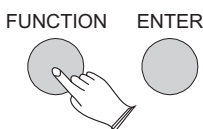

# Auto Accompaniment

Your piano has 100 accompaniment styles which can be used to provide Fully-orchestrated Auto Accompaniment. When the Auto Accompaniment function is turned on, your piano will create fully-orchestrated rhythm, bass and chord accompaniment based on chords you play with the left hand in the Auto Accompaniment section of the keyboard(i.e. all keys to the left of the Auto Accompaniment split point). The right-hand section of the keyboard is available for normal playing.

 The default Auto Accompaniment split point is the #F2 key. The Auto Accompaniment section of the keyboard Consists of all keys to its left .

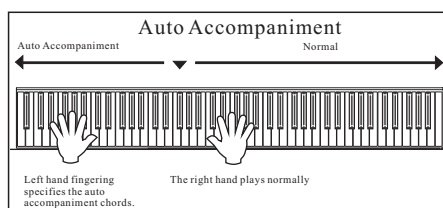


## Using Auto Accompaniment (Only Rhythm Track)

### Select a Rhythm Style

Press the [VOICE/STYLE] button again and its indicator will light, then use [+] and [-] buttons or the [DATA CONTROL] knob to select a Rhythm style.



 When the [STYLE] button is on, you can use the Direct Select Button to select a Rhythm style, if you like.



### Start a Rhythm Style

Press the [START/STOP] button to start a Rhythm style.

### Stop a Style

Press the [START/STOP] button again to stop a Rhythm style.

## Using Auto Accompaniment

### Select a Rhythm Style

Reference: Select a Rhythm style .(P.30)

### Turn On the Chord Function

Reference: "Chord Button " function.(P.34).

The left hand section of the keyboard becomes the Auto Accompaniment section, and chords played in this section are automatically detected and used as a basis for fully automatic accompaniment with the selected Rhythm style.

### Turn On the Synchro Start Function

Press the [SYNCHRO] button. The beat lamp will flash with the tempo and it's called synchronized start standby. The auto accompaniment will start as soon as you play a chord with your left hand.



### Stop Playing the auto accompaniment

Press the [START/STOP] button again to stop the auto accompaniment. An accompaniment progress can be stopped immediately by pressing the [START/STOP] button and also can be stopped with an appropriate ending by pressing the [INTRO/ENDING] button.

### Starting with an Intro

All your piano accompaniment patterns can be started with an appropriate introduction by pressing the [INTRO/ENDING] button directly.

If you press the [SYNCHRO] button and then press the [INTRO/ENDING] button, the accompaniment will start from the introduction as soon as a chord is detected in the AUTO ACCOMPANIMENT section of the keyboard.



## Fill-In

 
 
Press the [FILL IN 1] button at any time while the accompaniment is playing to add a fill-in.

If you press the [SYNCHRO] button and then the [FILL In1] button or the [FILL In2/VARIATION] button, the accompaniment will start from the fill-in as soon as a chord is detected in the AUTO ACCOMPANIMENT section of the keyboard.

## Tempo/Tap

This function allows you to set the rhythm tempo by tapping tempo on the [TEMPO/TAP] button. Tap the button 2 times while rhythm is playing, the rhythm tempo is set as your tapping tempo.

If you want to set the tempo before starting the rhythm, you have to tap the button 4 times ( only tap 3 times for 3/4 time signature) . You also can set the tempo by [+] and [-] buttons or the [DATA CONTROL] knob after tapping the button one time.

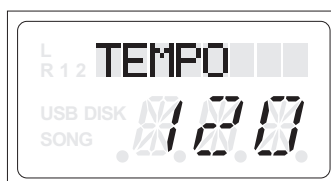


## Metronome

Metronome is a convenient feature for practice, and it can also provide a solid rhythmic guide when recording.

The metronome sound is alternately turned on and turned off by pressing the [METRONOME] button.

Hold the [METRONOME] button to enter the page for selecting the time signature. Then use [+] and [-] buttons or the [DATA CONTROL] knob to select your desired time signature.

 Time signature: 1/4, 2/4, 3/4, 4/4, 5/4,6/4, 3/8, 6/8, 7/8,9/8,12/8.  
Default: 4/4.

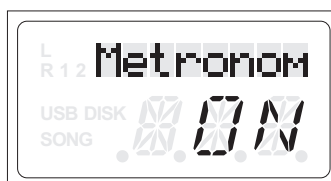

## Harmony Button

The harmony function features a variety of performance effects that enhance the melodies you play when using the accompaniment styles.

Press [HARMONY] button, the indicator is lighted.

The Harmony that you hear when you play the melody is derived from the chords you play if you use Automatic Accompaniment and turn on the Chord function.



Press [HARMONY] button again to exit Harmony function.

## Acc.vol Button

The volume of the auto accompaniment can be adjusted in the range of 00~127.

Press [ACC.VOL] button, "ACC.VOL" will flash in the display. Then use the number button to set the desired value, or use dial or [+]and[-] buttons to increase or decrease the value.

 


## NOTE

If you don't press any button for 3 seconds after entering the "ACC.VOL" setting mode, it will return to previous settings automatically.

## Chord Button

Press [CHORD] button to turn the chord function on. The left hand section of the keyboard becomes the Auto Accompaniment section, and chords played in this section are automatically detected and used as a basis for fully automatic accompaniment with the selected Rhythm style.




# Registration Memory

The piano can store 4 groups of 5 banks on the control panel settings. By pressing the corresponding memory button, you can recall these settings rapidly. You can preset the panel settings to suit to your performance and store them to the registration memory positions.



## Store

 Press the [REGIST/BANK] button repeatedly to select memory banks(1-4), and then hold the [REGIST/BANK] button and press the [M1-M5] button, the current control panel settings are stored in the memory.




## Load

  Press the [REGIST/BANK] button repeatedly to select memory banks(1-4), and then press the [M1-M5] buttons, can recall the information you have stored. The LCD displays the control panel settings as well as memory position number.

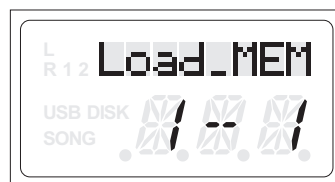



## Freeze Function

 Press the [FREEZE] button to turn ON/OFF the freeze function. When the freeze function is ON, the memory settings can be recalled with the exception of any accompaniment settings. You can use the registration memory function without affecting the accompaniment.



For example:

  When the [STYLE] button is on, you can press the [R&G] button, and press the [REGIST/BANK] button repeatedly to select the memory bank1, and then hold the [REGIST/BANK] button and press the [M1] button, the [R&G] style will be stored in the memory(SAVE\_MEM 1-1).



When the [STYLE] button is on, you can press the [SWING] button, and press the [REGIST/BANK] button repeatedly to select the memory bank1, and then hold the [REGIST/BANK] button and press the [M2] button, the [SWING] style will be stored in the memory(SAVE\_MEM 1-2).

When the freeze function is OFF, press the [START/STOP] to start a rhythm style, when you press the [M1] button, the [R&G] style will be played; when you press the [M2] button, the [SWING] style will be played.

When the freeze function is ON, the memory settings can be recalled with the exception of any accompaniment settings. Press the [START/STOP] to start a rhythm style, you can press the [M1] button to load data, then use the registration memory function without affecting the accompaniment; when you press the [M2] button load data, the registration memory function is also without affecting the accompaniment.



# Song Recording

The Song Recorder (or sequencer) built into piano can record two individual tracks, allowing you to record one part and then play and record a second complementary part while the first part plays back.

## Record a Track

### Track1

1. Hold down the [RECORD] button, then press the [TRACK1] button, the light of the [TRACK1] button will flash and the light of the [RECORD] button will turn on. Accompaniment cannot be recorded into the track1.



2. Play the piano or start Rhythm and the Song Recorder will start recording.



3. Press the [RECORD] button again to end off the recording.

### NOTE

If the TRACK 2 has data recorded, the indicator will light and it will play when the recording has started. You can press the [TRACK 2] button to mute it, then the indicator will turn off. The style should be recorded in the [TRACK 2] only.

### Track2

1. Hold down the [RECORD] button, then press the [TRACK2] button, the light of the [TRACK2] button will flash, the light of the [RECORD] button will turn on.



2. Play the piano or start Rhythm and the Song Recorder will start recording.



 
3. Press the [RECORD] button again to end off the recording.

### NOTE


If the TRACK 1 has data recorded, the indicator will light and it will play when the recording has started. You can press the [TRACK 1] button to mute it, then the indicator will turn off.

## Play the Recording

Press the [PLAY] button to play the local recording. During song playback you can select which track you wish to hear by press the [TRACK 1] or [TRACK 2] button.



 Press the [PLAY] button again to stop the recording.




### NOTE

If there is any recorded material on any Track then that Track button will be lit.

## Delete the Recording

 Hold down the [TRACK 1] or [TRACK 2] button for 3 seconds until the LCD shows: DEL\_TRK1 or DEL\_TRK 2, then it will automatically delete .

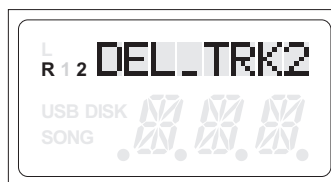


Press both the [PLAY] and [RECORD] button simultaneously, then it will delete the data of all tracks .

# Play Along Songs

 There are 376 songs built into this Piano for your musical enjoyment. These songs have separate left and right-hand parts that can be turned on and off as required so you can practice the corresponding part on the piano.

## Song Tutor

Turn on the song mode by pressing both the [LEFT] and [RIGHT] buttons simultaneously. The song bank will appear on the LCD display.

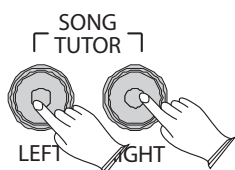


There are 6 song banks in the piano: Playalon ( includes 55 songs),Beyer (includes 106 songs),Czerny( includes 100 songs),Czerny (includes 30 songs),Czerny( includes 40 songs),SONATINE( includes 45 songs).

In the song mode, press the [+] and [-] buttons or the [DATA CONTROL] knob to select the song bank, then press the [ENTER] button to confirm , then you can use [+] and [-] buttons or the [DATA CONTROL] knob to select the desired song. Press the [PLAY/STOP] button to start the song.


## Listening To The Entire Song

 - 1). With the play along song mode engaged, press the [PLAY] button to hear both hand parts playing the entire song.
- 2). Press the [PLAY] button again to stop. Otherwise, playback will stop automatically at the end of the song.

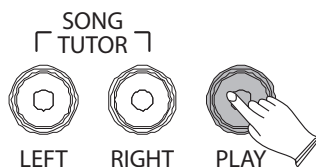

## Practicing The Right Hand Of The Selected Song

 1). With the play along song mode engaged, press the [RIGHT] button to mute the right hand part. The right indicator will not light.

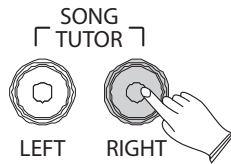

2). Press the [PLAY] button. Its indicator will flash and you will hear the metronome "count in" the song. You will then hear the left-hand part.

3). Play the right-hand part of your selected song while the left-hand part plays.

4). Press the [PLAY] button again to stop. Otherwise, playback will stop automatically at the end of the song.

## Practicing The Left Hand Of The Selected Song

Follow steps 1-4 listed above, substituting the [LEFT] button whenever RIGHT button is mentioned. You will hear the right-hand part of your selected song. Play the left-hand part of your selected song while the right-hand part plays.

### Exit the mode

 
Press both the [LEFT] and [RIGHT] buttons simultaneously to exit the mode.

# Factory Reset

1. Turn off the power.



2. Hold [+] and [-] buttons, then turn the power on. It can restore all functions to factory defaults.

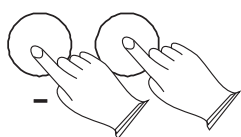

## NOTE

If the "RESET" remains on the LCD, this means it can not restore all functions to factory defaults.

# Appendix

## MIDI Implementation Chart

Function		Transmitted	Recognized	Remarks
<b>Basic Channel</b>	Default Changed	1-16 1-16	1-16 1-16	*Up to 3 channels simultaneously
<b>Mode</b>	Default Messages Altered	Mode 3 Yes *****	Mode 3 No No	
<b>Note Number</b>	True voice	0~127 *****	0~127	
<b>Velocity Note</b>	Note ON Note OFF	Yes Yes	Yes Yes	
<b>After Touch</b>	Key's Channels	No No	No No	
<b>Pitch Bend</b>		Yes	Yes	
<b>Control Change</b>		0-127	0,1,5,6,7,10,11, 32,64,65,66,67, 80,81,91,93,100, 101,121	
<b>Program Change</b>	True #	0-127 *****	0-127	0-127
<b>System Exclusive</b>		Yes*	Yes*	*The controller will recognize and respond to GM Device inquiries. Master Tune supported. Master Volume supported.
<b>System Common</b>	Song Position Pointer Song Select Tune Request	No No No	No No No	
<b>System Real Time</b>	Clock Commands	No No	No No	
<b>Aux Messages</b>	All Sounds Off* Reset All Controllers Local ON/OFF* ALL Notes OFF Active Sensing System Reset	Yes Yes Yes Yes No No	Yes Yes Yes Yes Yes Yes	* The controller will respond to GM, but not piano voices.
<b>Notes</b>				

MIDI Channel Modes		
	POLY OFF	MONO ON
OMNI ON	Mode1	Mode3
OMNI OFF	Mode2	Mode4

## Voice List

NO.	PROGRAM CHANGE	BANK	VOICE NAME
<b>PIANO</b>			
01	0	0	GrandPno
02	1	0	BritePno
03	2	0	El.Grand
04	3	0	HnkyTonk
05	4	0	ElPiano1
06	5	0	ElPiano2
07	6	0	Harpsich
08	7	0	Clavi.
<b>CHROMATIC PERCUS</b>			
09	8	0	Celesta
10	9	0	Glocken
11	10	0	MusicBox
12	11	0	Vibphone
13	12	0	Marimba
14	13	0	Xylophon
15	14	0	TubulBel
16	15	0	Dulcimer
<b>ORGAN</b>			
17	16	0	DrawOrgn
18	17	0	PercOrgn
19	18	0	RockOrgn
20	19	0	ChrcOrgn
21	20	0	ReedOrgn
22	21	0	Acordion
23	22	0	Harmnica
24	23	0	TangoAcc
<b>GUITAR</b>			
25	24	0	NylonGtr
26	25	0	SteelGtr
27	26	0	Jazz Gtr
28	27	0	CleanGtr
29	28	0	Mute Gtr
30	29	0	Ovrdrive
31	30	0	Distortd
32	31	0	Gtr Harm
<b>BASS</b>			
33	32	0	AcstBass
34	33	0	FngrBass
35	34	0	PickBass
36	35	0	Fretless
37	36	0	SlapBas1
38	37	0	SlapBas2
39	38	0	SynBass1
40	39	0	SynBass2
<b>STRINGS</b>			
41	40	0	Violin
42	41	0	Viola
43	42	0	Cello
44	43	0	Contra
45	44	0	TremStrg
46	45	0	Pizzicto
47	46	0	OrchHarp
48	47	0	Timpani
<b>ENSEMBLE</b>			
49	48	0	StrEsmb1
50	49	0	StrEsmb2

NO.	PROGRAM CHANGE	BANK	VOICE NAME
51	50	0	SynStrg1
52	51	0	SynStrg2
53	52	0	ChoirAah
54	53	0	VoiceOoh
55	54	0	SynVoice
56	55	0	Orch Hit
<b>BRASS</b>			
57	56	0	Trumpet
58	57	0	Trombone
59	58	0	Tuba
60	59	0	MuteTrum
61	60	0	FrenchHr
62	61	0	BrasSect
63	62	0	SynBras1
64	63	0	SynBras2
<b>REED</b>			
65	64	0	SprnoSax
66	65	0	Alto Sax
67	66	0	TenorSax
68	67	0	Bari Sax
69	68	0	Oboe
70	69	0	EnglHorn
71	70	0	Bassoon
72	71	0	Clarinet
<b>PIPE</b>			
73	72	0	Piccolo
74	73	0	Flute
75	74	0	Recorder
76	75	0	PanFlute
77	76	0	Bottle
78	77	0	Shakhchi
79	78	0	Whistle
80	79	0	Ocarina
<b>SYNTH LEAD</b>			
81	80	0	SquareLd
82	81	0	Saw Ld
83	82	0	CaliopLd
84	83	0	Chiff Ld
85	84	0	CharanLd
86	85	0	Voice Ld
87	86	0	Fifth Ld
88	87	0	Bass +Ld
<b>SYNTH PAD</b>			
89	88	0	NewAgePd
90	89	0	Warm Pd
91	90	0	PolysyPd
92	91	0	Choir Pd
93	92	0	Bowed Pd
94	93	0	Metal Pd
95	94	0	Halo Pd
96	95	0	Sweep Pd
<b>SYNTH EFFECT</b>			
97	96	0	Rain
98	97	0	SoundTrk
99	98	0	Crystal
100	99	0	Atmosphr
101	100	0	Brightns

NO.	PROGRAM CHANGE	BANK	VOICE NAME
102	101	0	Goblins
103	102	0	Echoes
104	103	0	SciFi
<b>ETHNIC</b>			
105	104	0	Sitar
106	105	0	Banjo
107	106	0	Shamisen
108	107	0	Koto
109	108	0	Kalimba
110	109	0	Bagpipe
111	110	0	Fiddle
112	111	0	Shanai
<b>PERCUSSIVE</b>			
113	112	0	TnklBell
114	113	0	Agogo
115	114	0	Stl Drum
116	115	0	WoodBlok
117	116	0	TaikoDrm
118	117	0	MelodTom
119	118	0	SynthDrm
120	119	0	RevCymbl
<b>SOUND EFFECT</b>			
121	120	0	FretNois
122	121	0	BrthNois
123	122	0	Seashore
124	123	0	Tweet
125	124	0	Telephone
126	125	0	Helicopt
127	126	0	Applause
128	127	0	GunShot
<b>DRUM LIST</b>			
129	0	127	StndrdP.
130	8	127	Room
131	16	127	Power
132	24	127	Eletroni
133	25	127	Synth
134	32	127	Jazz
135	40	127	Brush
136	48	127	Classic
137	56	127	Effect





## Troubleshooting Hints

<ul style="list-style-type: none"> <li>•When the instrument is turned on or off, a popping sound is temporarily produced.</li> </ul>	<p>This is normal and indicates that the instrument is receiving electrical power.</p>
<ul style="list-style-type: none"> <li>•When using a mobile phone, noise is produced. Using a mobile phone in close proximity to the instrument may produce interference.</li> </ul>	<p>To prevent this, turn off the mobile phone or use it further away from the instrument.</p>
<ul style="list-style-type: none"> <li>•Not all of the voices seem to sound, or the sound seems to cut off.</li> </ul>	<p>The instrument is polyphonic up to a maximum of 64 notes — including Dual voice, Split Voice, auto accompaniment, song, and Metronome. Notes exceeding this limit will not sound.</p>
<ul style="list-style-type: none"> <li>•The Auto Accompaniment does not sound properly.</li> </ul>	<p>Make sure that the Auto Accomp Volume Function is set to an appropriate level. Is the Split Point set to an appropriate key for the chords you are playing? Set the Split Point to an appropriate position on the keyboard. Is the chord indicator showing in the LCD display? If it is not showing, press the CHORD button so that it does display properly..</p>
<ul style="list-style-type: none"> <li>•No sound produced by the keyboard, but the lights and screen work.</li> </ul>	<p>Check that the master volume control is not set to minimum. Check that nothing is plugged into the headphone socket.</p>
<ul style="list-style-type: none"> <li>•The sound of the voice changes from note to note.</li> </ul>	<p>This is normal. The digital tone generation uses multiple recordings (samples) of an instrument across the range of the keyboard; The actual sound of the voice may be slightly different from note to note.</p>
<ul style="list-style-type: none"> <li>•The volume is too soft.</li> <li>•The sound quality is poor.</li> <li>•The rhythm stops unexpectedly or will not play.</li> <li>•The recorded data of the song, etc. does not play correctly.</li> <li>•The LCD display suddenly goes dark, and all panel settings are reset.</li> </ul>	<p>The batteries are low or dead. Replace all six batteries with completely with new ones, or use the supplied AC adapter. If you have lost or damaged your AC adaptor, please contact your nearest store for a correct replacement adapter. An incorrect AC mains adaptor which is not rated sufficiently can cause malfunction or damage.</p>
<ul style="list-style-type: none"> <li>•To completely restore all settings as per factory settings</li> </ul>	<p>Perform a factory reset, Please refer to content in this owner's manual. All of the user setting will be erased and the default factory settings will be applied to the instrument.</p>
<ul style="list-style-type: none"> <li>•Power suddenly and unexpectedly turns off, after a period of not touching the keys.</li> </ul>	<p>This is normal and the Auto Power Off function may have been activated. If you need to disable the Auto Power Off function, please see how to do this in the owner's manual.</p>
<ul style="list-style-type: none"> <li>•The sustain pedal or footswitch seems to produce the opposite effect. Example pressing the footswitch deactivates the sustain, and releasing the footswitch triggers the sustain.</li> </ul>	<p>The polarity of the footswitch needs to be correctly detected. Make sure the the footswitch is properly connected. Turn the piano on while not touching the pedal.</p>

## Specifications

Keyboard:	88 weighted velocity-sensitive keys
Display:	Multi-Function LCD Display
Polyphony:	64
Voice:	137
Pedal:	Sustain,Sostenuto,Soft(support Expression pedal). All pedal support user setting function.
EQ:	BASS[-12,+12]dB , TREBLE[-12,+12]dB
Effect:	Reverb(8 types),Reverb Level, Chorus(13 types),Chorus Level
style:	100
style Feature:	Syschro start,Intro,Ending,Fillin,Variation,Accompaniment, Freeze,Volume,Metronome
Keyboard control	Split,Layer,Duet,Harmony,Tune,Transpose,Octave,6 Touch Sensitivity and Fixed touch Response
Demo	10 demo + 376 learning songs
Learning function	Left/Right learning
Song recording	Two melody track recording in local memory(Track2 allow record rhythm)
Registration Memory	4 banks,5 memories per bank.Total 20 REG memories.
Others	PitchBend wheel, AutoPoweroff, USB MIDI/USB AUDIO
Interface	DC Power, Phones, Line OUT, MIC Vol, MIC, Aux In, SUS/SOS, SOFT(VOL), USB to Host
Dimensions(W x D x H):	50 x 10.6X7.1 inches,1270mm x 270mm x 180 mm
Weight:	19.8lbs or 9Kg

# Warranty

This product, except the exterior cosmetic parts, is warranted to the original purchaser to be free from defects in material and workmanship under normal use as follows:

1. For a period of one year from the date of purchase, Virgin Musical Instrument Company will pay the labor charges to repair the defective product. After this one year period, you must pay all labor charges.
2. In addition, Virgin Musical Instrument Company will supply, at no charge, new or rebuilt replacements for defective parts for a period of one year from the date of purchase.

In the event repairs are needed, the original purchaser should contact Virgin Musical Instrument Company, the parent company of Artesia Pianos, at **888-998-9848**. Virgin Musical Instrument Company will then repair the product or return it to the VMI distribution center for repairs. Upon completion of the repair, the unit will be returned to the music store, freight prepaid.

This warranty will not apply to this product if it has been misused, abused, or altered. Without limiting the foregoing, bending, dropping of unit, or visible cracks and/or scratches are presumed to be defects resulting from misuse or abuse.

This warranty is void if the product has been opened.

Neither this warranty nor any other warranty expressed or implied, including implied warranties of merchantable, shall extend beyond the warranty period.

No responsibility is assumed for any incidental or consequential damages.

Outside the US contact the original retailer where the product was purchased for additional warranty details.

artesia

Virgin Musical Instrument Company Inc

P O Box 2908

La Mesa, CA 91943

PH: 619 244-0006

E-mail: [info@virginmusicalinstruments.com](mailto:info@virginmusicalinstruments.com)

[www.virginmusicalinstruments.com](http://www.virginmusicalinstruments.com)